



Release Notes

MLTG-CN

Version: 1.4.2-00287-d6b0c34
Enhanced from version 1.4.1-00209-5f349dd

Copyright Notification

Edgecore Networks Corporation


© Copyright 2023 Edgecore Networks Corporation.

Table of Content

1. Management VLAN.....	2
2. Registration MAC address for ecCLOUD	2
3. GUI Enhancement for Link Settings	2
4. Issue Fixed	3
5. Known Issue	3

1. Management VLAN

Management VLAN for LAN is supported from version 1.4.2. The new configurations are added under LAN Settings, in Network > Interface page.

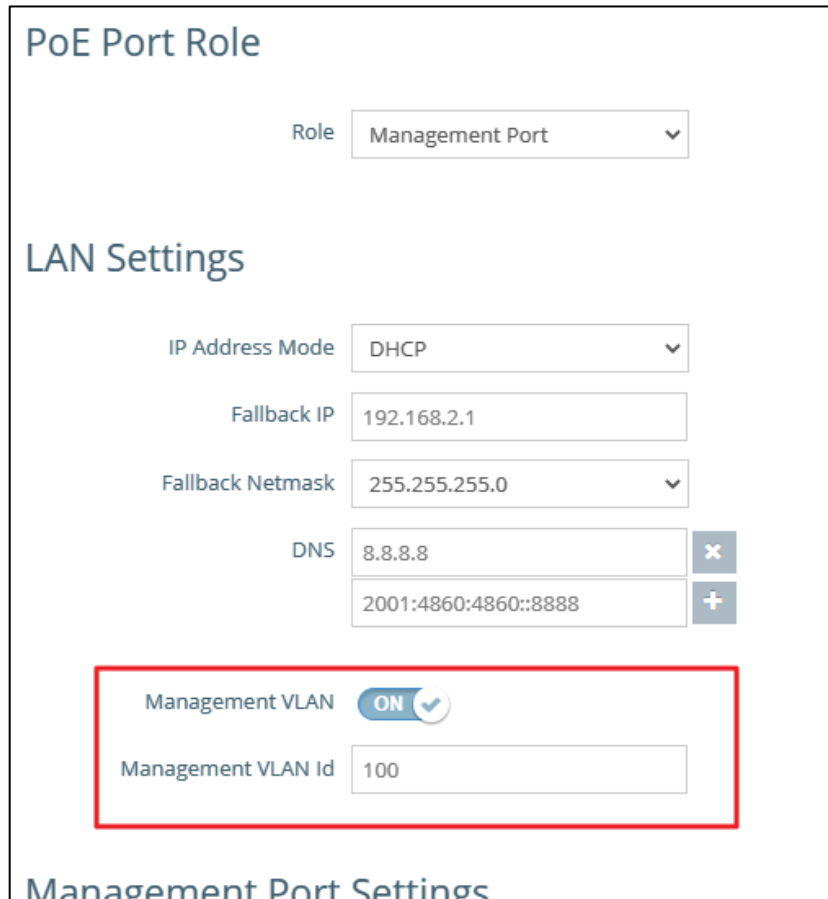

The screenshot displays the configuration interface for a PoE Port Role. It is divided into two main sections: "PoE Port Role" and "LAN Settings".

- PoE Port Role:** The "Role" is set to "Management Port".
- LAN Settings:**
 - IP Address Mode: DHCP
 - Fallback IP: 192.168.2.1
 - Fallback Netmask: 255.255.255.0
 - DNS: 8.8.8.8 (with a delete 'x' button) and 2001:4860:4860::8888 (with an add '+' button).
- Management VLAN Settings (highlighted with a red box):**
 - Management VLAN: ON (checked)
 - Management VLAN Id: 100

The bottom of the page is labeled "Management Port Settings".

Please note that when in "Client Mode (Terragraph Mode)", the POP node will automatically synchronize the management VLAN settings, so that the management VLAN will be the same for all nodes in the same network. If the operation mode is "Base Station Mode" or "Client Mode (Point-to-point Mode)", the management VLAN settings must be configured manually on every node.

2. Registration MAC address for ecCLOUD

From version 1.4.2, MLTG-CN and MLTG-CN LR need to be registered to ecCLOUD with the MAC address of the uplink port (PoE IN Port).

3. GUI Enhancement for Link Settings

In Base Station mode, it is allowed to configure up to 32 peer MAC addresses. However, only 15 links can be enabled for MLTG-CN.

4. Issue Fixed

- Link status can be retrieved via SNMP now, no matter the operation mode is base station mode or client mode.
- When connected with DN, the cloud management option will be synchronized with the POP node correctly.
- The interfaces which are bridged to the internet will be shown in the dashboard now.
- The WPA2-PSK passphrase can be configured one by one on the MLTG-CN and MLTG-CN LR in Terragraph mode now.
- After upgrading from older version, the operation mode can be migrated correctly now.
- Fixed an issue of log size increases unlimitedly in base station mode if there are disconnected links.

5. Known Issue

- It requires all devices in the same topology to reset to default before switching management option between local controller and ecCLOUD.
- When in base station mode, the link status is not displayed correctly.
- When connected with MLTG-360, after POP node synchronizes the SNMP settings to MLTG-CN or MLTG-CN LR, the settings are not reflected on GUI.
- When connected with MLTG-360 in Terragraph mode, after doing some topology change, the VXLAN information of MLTG-CN LR may failed to be shown in the link status page.
- In base station mode, if there are multiple links, modifying channel from ecCLOUD will make some links disconnected. To prevent this issue, you can disable all the links first, then modify channel, and at last enable all the links.
- After applying “Client Mode (Point-to-point Mode), it will show “Client Mode (Terragraph Mode)” until the link to a base station mode CN is established.
- When connecting with a DN (in Terragraph mode), if switching the LAN settings between static IP and DHCP, it requires an addition manual reboot to make the connection back.
- In link status, the PER value is one digit different.
- In base station mode, modifying the peer MAC address of a link will not make the original link disconnected, and the new link will not take effect before a manual reboot.